


Instruction Manual

oneQ glow

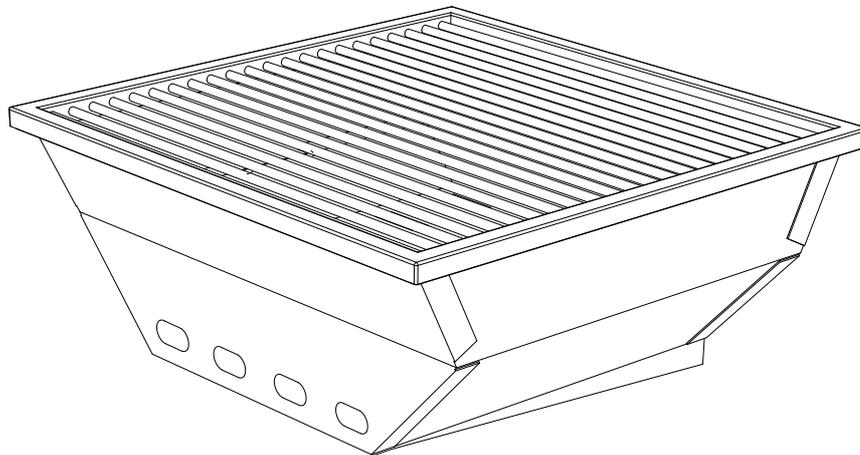

Introduction

Congratulations with the purchase of your *oneQ glow*!
The *oneQ* is made to provide you with barbecue fun for years.
The highest demands are made on the convenience and safety.



READ CAREFULLY

In case the barbecue is used and maintains correctly it will work safety and reliable for years. Read the manual carefully before using or installing the barbecue, so you are aware of all the important issues.

Safety measures and warnings

The parts of the *oneQ glow* will become very hot during use. Contact with these parts may cause burns to body, clothes or other sensitive materials. For that it is very important that you consistently follow all safety instructions, to prevent risks damage or accidents.



Use special firelighter cubes to light the grill. Never use alcohol, gasoline or burning gel. This can cause a flash fire and serious burns or accidents!

Before handling the parts of the barbecue use proper heat-resistant gloves such as oven mitts. Note that after use the parts remain very hot for some time!

Make sure you wear fire resistant clothes while using the barbecue. Some synthetic materials are very fire sensitive and should not be worn. Do not wear loose fitting clothes or clothes that blow away easily and can catch fire unexpectedly.

Only use this barbecue outdoors. Never use the barbecue in confined spaces like a garage, barn nor other kind of building. Never use the barbecue in or on recreational vehicles or boats.

Use a firm flat surface where the barbecue stands stable and at state level as much as possible. Do not move the barbecue while using.



Make sure there are no children playing, sitting or standing around the barbecue

Only use the barbecue for frying and grilling meat, fish, poultry and vegetables. Using other products is at your own risk. Do not heat up any unopened cans because the accumulated pressure can lead to bursting of the cans.

Keep the grill away from flammable materials.

Only clean the parts when they are cooled down appropriately. Some cleaners produce unhealthy fumes or ignite even if they are used on a hot surface. Make sure the barbecue is not in operation during the cleaning.

Charcoal and briquettes remain glowing for hours after using. Make sure that everything is cooled down before cleaning or removing the grill!

Applying modifications to the equipment is dangerous and prohibited.

The manufacturer can not be held responsible for accidents, injury or damage caused by inadvertent use of oneQ barbecue.

Usage and users instructions

In the first use of the barbecue it is important that you completely remove all packaging materials. Before you use the *glow* for the first time, you should wash it in hot water with mild detergent.

Now place the scuttle in the stand. Then the ashtray, the coal grate and grill can be placed.

To use the barbecue fill the grid with a layer of coal briquettes approximately 5 cm high. Place between the briquettes some firelighters cubes. Light the firelighters cubes and place the grill on the barbecue. If the flames are gone and the briquettes are glowing the barbecue is ready for use.

The ash of the burned briquettes is caught in the ashtray. You can empty the ashtray after using the barbecue by remove it from the scuttle.

We recommend cleaning the parts of the *oneQ glow* after each use. Empty the ashtray after each use. Check all places where oil, grease or food residue may accumulate, then all components remain in optimal condition.

If you have problems with your *oneQ glow* or if you want to order (reserve) parts, contact your dealer or see www.one-q.com, where you find an extensive customer service section.

oneQ B.V.
www.one-q.com

